

# INSTALLATION INSTRUCTIONS 1965-82 CORVETTE REAR TRAILING ARM BRAKE LINE




PROPER  
LINE PATH  
VIEW

CLICK  
HERE TO SEE  
ALL OF OUR  
TRAILING ARM  
BRAKE  
LINES!

## INSTALLATION INSTRUCTIONS

Attach

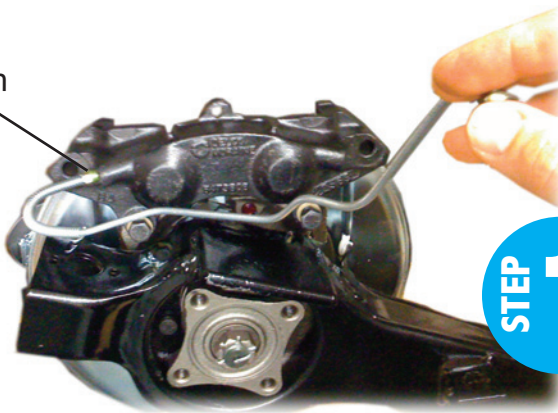

STEP  
**1**

\*NOTE: Don't forget to bleed your brake system any time after installing new lines to ensure proper and maximum brake operation

Start by attaching the rounded end of the line to the caliper as pictured.

STEP  
**2**

Next, swing the line down in place until the hose end lines up with the Hose fixing hole as pictured. Attach your brake hose to the fixing hole with the horse shoe clip (part #P-220) then tighten your new Trailing Arm Line to the hose and she's all done!\*



Attach

**cssb**

CORVETTE STAINLESS STEEL BRAKES, INC.

www.cssbinc.com | email: sales@cssbinc.com

